

How To Swap Your Steering Wheel

Tools Needed: 18mm Socket, Ratchet or Impact Driver, Mallet



- **Step One:** Remove the front plastic cover of the steering wheel. Pull the top of the plastic cover towards you, you will hear the clips release. The cover can be set aside at this time.



- To re-install, place the steering wheel on the splines of the shaft. Tighten nut by hand and then tighten with ratchet/Impact driver. Place center cover over steering wheel and press firmly at the bottom and top.