

How To Swap Your Steering Wheel

Tools needed: 18mm Socket, Extension, Ratchet or Impact Driver, H3 Allen Key, Mallet



- **Step One:** Remove the 6 Allen head screws around the trim ring. The trim ring, the center button, and the steering wheel will all be free from the steering hub.



Once the 6 allen heads have been removed the steering wheel may be set aside



Pictured is the steering wheel with the trim ring and center cap removed

- **Step Two:** Hold the bare steering wheel up to the steering hub, re-insert a minimum of two Allen head screws and tighten till snug.



- **Step Three:** Using your extension, 18mm socket, and ratchet, remove the steering shaft nut. Thread the nut back on about 3 threads and give the steering wheel a few firm pulls. This should free the steering hub from the shaft and the assembly can be removed.